
If you are experiencing hear loss from your Whisper earpiece:

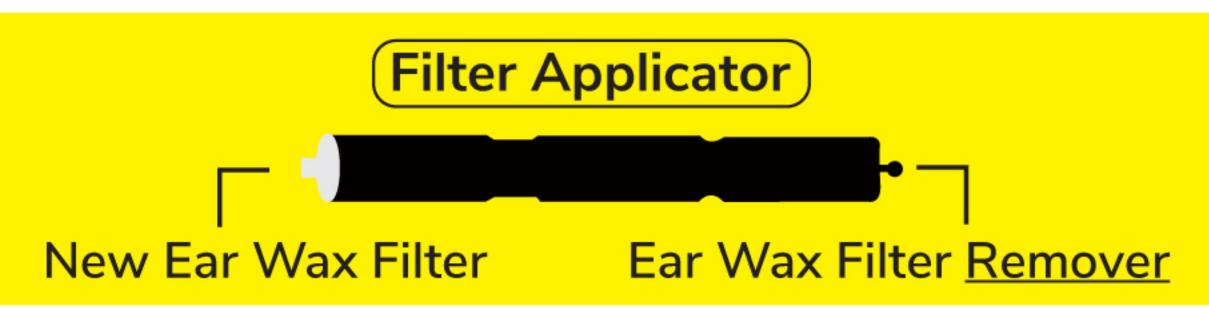

1.) Remove Silicone Ear Tip from speaker.



Gently insert the black tip of the Filter Applicator into the speaker then pull to remove the wax guard.



Re-insert a new white wax guard of the Filter Applicator into the speaker and gently pull.



- 4.) Now re-insert the Silicone Ear Tip.
- Scan this QR code for a video demonstration on how to properly clean your Whisper earpiece:

