

TIP: START WITH THE RADIO VOLUME AT THE LOWEST LEVEL. The Micro Sound is unique in that the micro speaker is delivering sound directly into your ear. The sound will be different than what you have experienced with clear tubes. If you are in an area that has radio static or interference, this will be amplified with the Micro Sound. Turning up the radio volume will not eliminate this static or interference.

Exposure to loud noises from any source for extended periods of time may temporarily or permanently affect your hearing. The louder the radio's volume, the less time is required before your hearing can be affected. Hearing damage from loud noises is sometimes undetectable at first and can have a cumulative effect.

To protect your hearing:

- Reduce the volume before connecting headset or earpiece.
- Use the lowest volume necessary to do your job.
- Increase the volume only if you are in noisy surroundings.

MANUFACTURER'S LIMITED WARRANTY

Your Sales Receipt is required to validate & obtain warranty services.

Your EPC product is warranted against internal defects in material or workmanship. All of our earphones are warranted for 12 months. Hygiene restrictions prevent us from extending our limited warranty to wearable parts such as: Fin Ultra™ ear tips, earmolds, clear tubes & ear inserts.

The warranty is extended to the original purchaser only and does not cover the following:

- * Physical abuse
- * Damage from tugging or pulling
- * Crushing or smashing in any way, shape or form
- * Improper maintenance of unit
- * Frayed, torn or exposed wires

General misuse of the item such as: Excessive voltage, tampering with the unit or repairs attempted by someone other than the manufacturer will void the MANUFACTURER'S LIMITED WARRANTY.

The manufacturer reserves the right to evaluate & refuse warranty based on their evaluation. In order to obtain warranty services, proof of purchase must be returned along with the product.

For Returns Dept. & Return Authorization # Call Toll Free: (888) 372-1888.

After calling, send your return along with your name address & Return Authorization # to:

The Earphone Connection, Inc.

25139 Avenue Stanford

Valencia, CA 91355

IMPORTANT SAFETY INFORMATION


Earphone Connection, Inc. products are designed to produce a specific audio output level at maximum rated power. Modifying these devices in any way including adding or removing components & accessories may change the audio output of the device & could result in PERMANENT HEARING DAMAGE.

Many countries have regulations defining the amount of noise that an individual can be subjected to during a normal workday. Compliance is application-dependent and standards vary. It is the SOLE RESPONSIBILITY of the end user to determine applicability and compliance to local hearing protection regulations.

Earphone Connection, Inc. strongly recommends that the radio is off before installation of audio accessory. Once audio accessory is securely installed radio can be turned on. Radio volume switch is recommended to set at low position and adjusted once radio is turned on.

FOLLOW US

FACEBOOK • INSTAGRAM • TWITTER • YOUTUBE

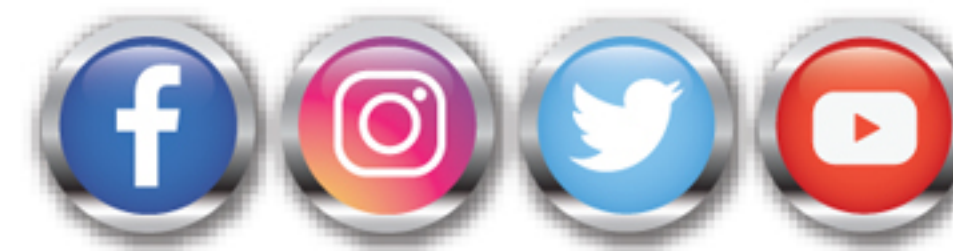

**EARPHONE
CONNECTION**

888.372.1888

www.earphoneconnect.com

25139 Avenue Stanford
Valencia, CA 91355


**EARPHONE
CONNECTION**

WHISPER HAWK USER MANUAL



www.earphoneconnect.com

Featuring
Easy-Connect with
Guide Arrows

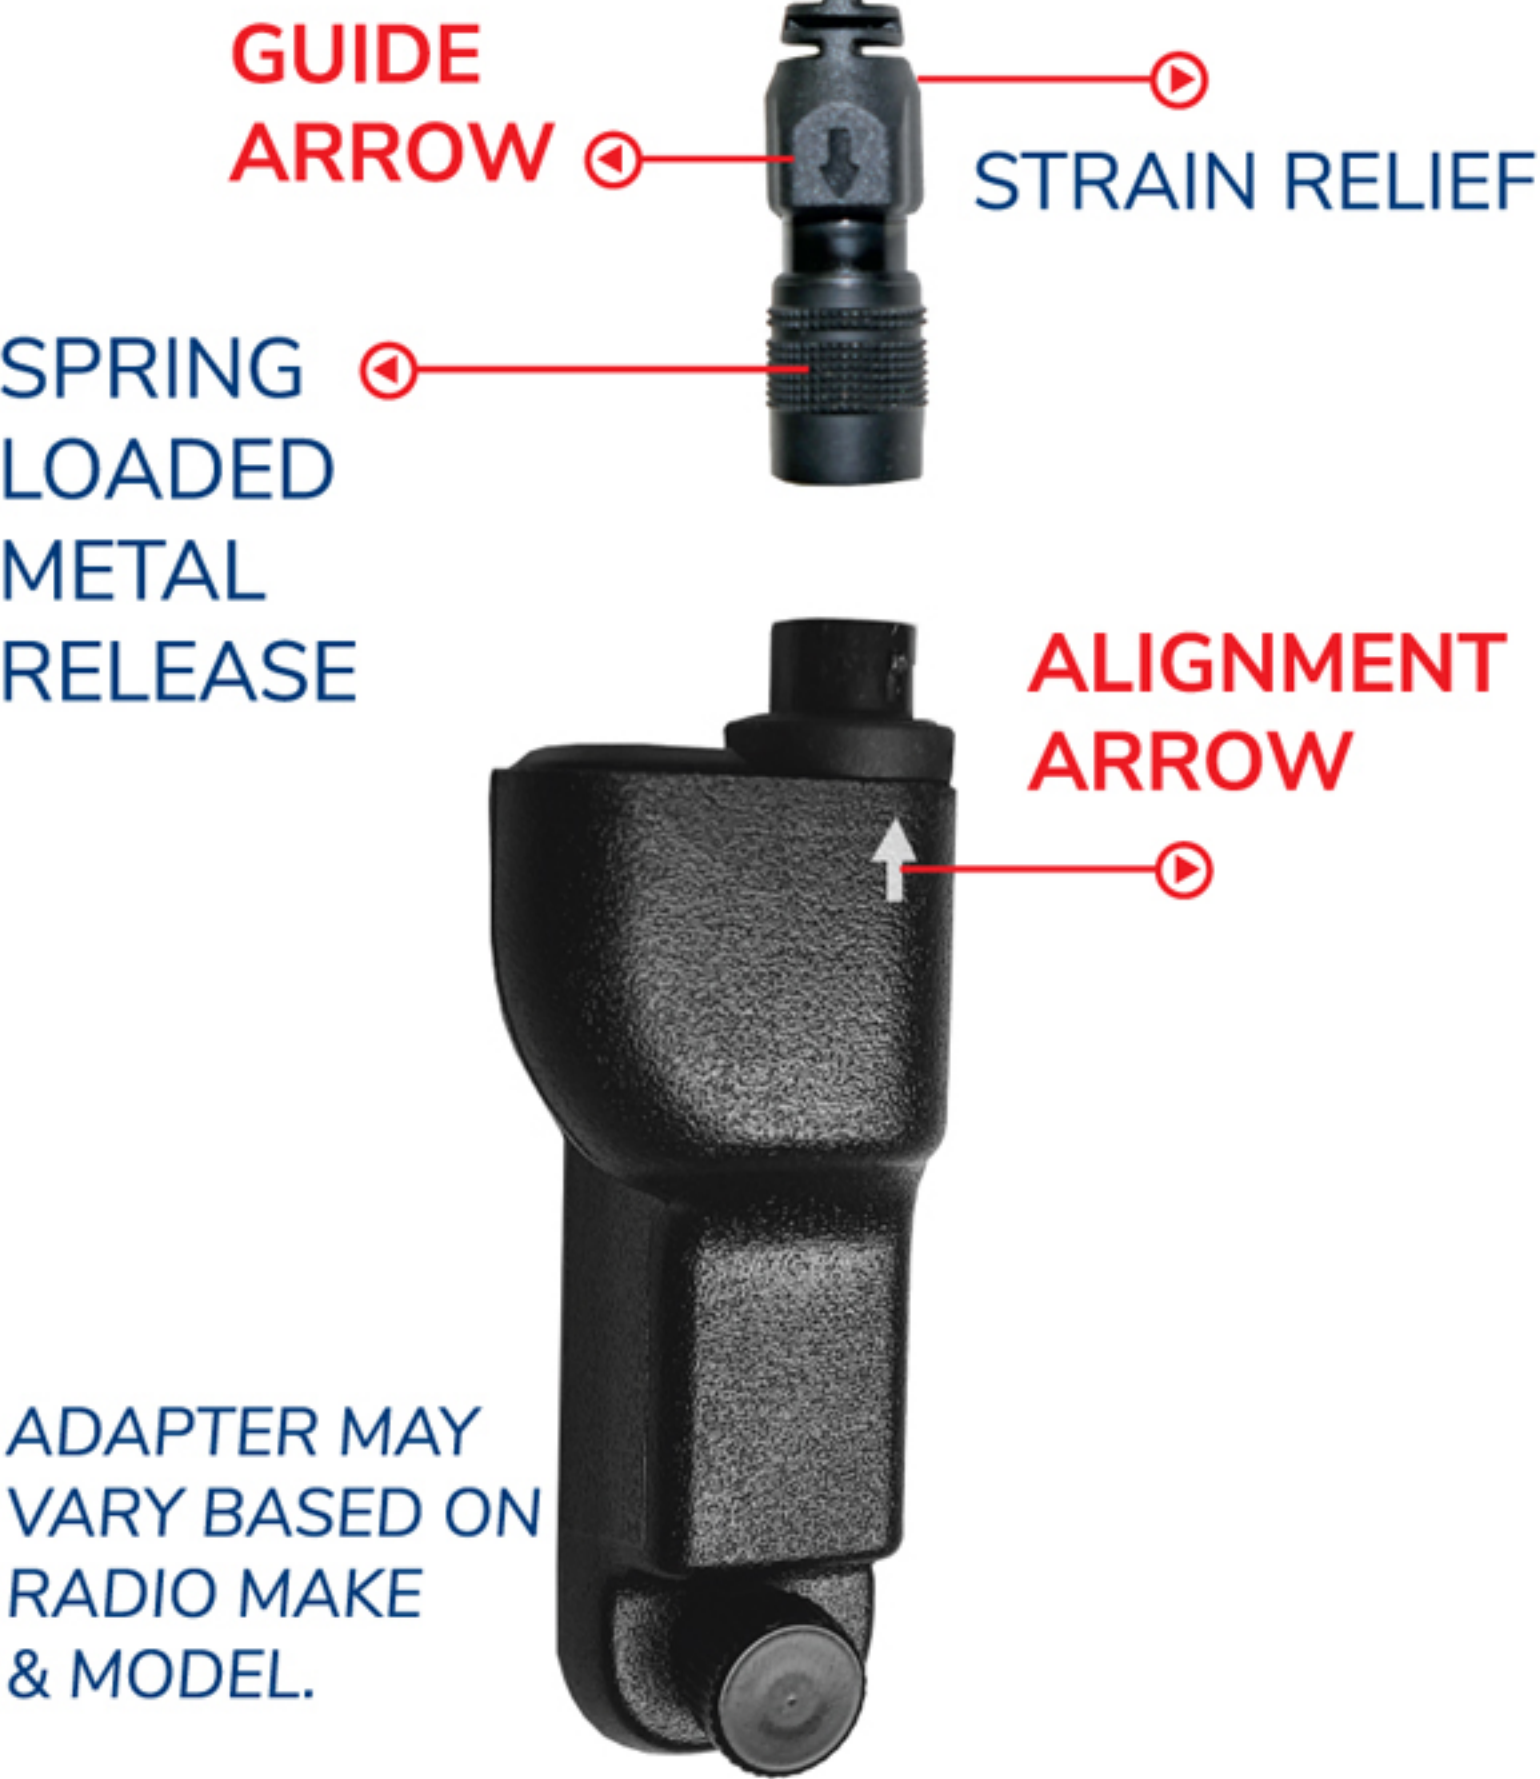

TO CONNECT, grab the cable from the connector with the fore finger & thumb on either side of the guide arrow. Align the guide arrow with the alignment arrow on the radio adapter & gently push down.

Easy-Connect:
Guide Arrow & Alignment Arrow are lined up.



TO RELEASE, with the same two fingers grab the spring loaded metal release and pull up.



The Whisper package includes a wax guard cleaning kit with 8 wax guard replacements, a clothing clip, and extra ear tips.



Scan this QR code for a video on cleaning and maintaining your Whisper Earpiece.

Note: When removing the silicone Ear Tip, be careful to look for the old ear wax guard inside the tip and discard. The wax guard can get dislodged and stuck inside of the wax guard tip.

If you are experiencing hear loss from your Whisper earpiece:

Filter Applicator

New Ear Wax Filter Ear Wax Filter Remover

1. Remove Silicone Ear Tip from speaker.

Silicone Ear Tip Micro Speaker

2. Gently insert the black tip of the Filter Applicator into the speaker then pull to remove the wax guard.

Used Ear Wax Filter

3. Using a new Filter Applicator re-insert a white wax guard into the speaker and gently pull.

New Ear Wax Filter

New Ear Wax Filter is now applied.

4. Now re-insert the Silicone Ear Tip.