

FIN ULTRA™

AMBI


AMBIDEXTROUS COMFORT EAR TIP

Patent Pending: 15636607




Insert the Ambi tip
onto the elbow

Make sure curve of the Ambi
tip follows curve of the
acoustic tube for proper fit.

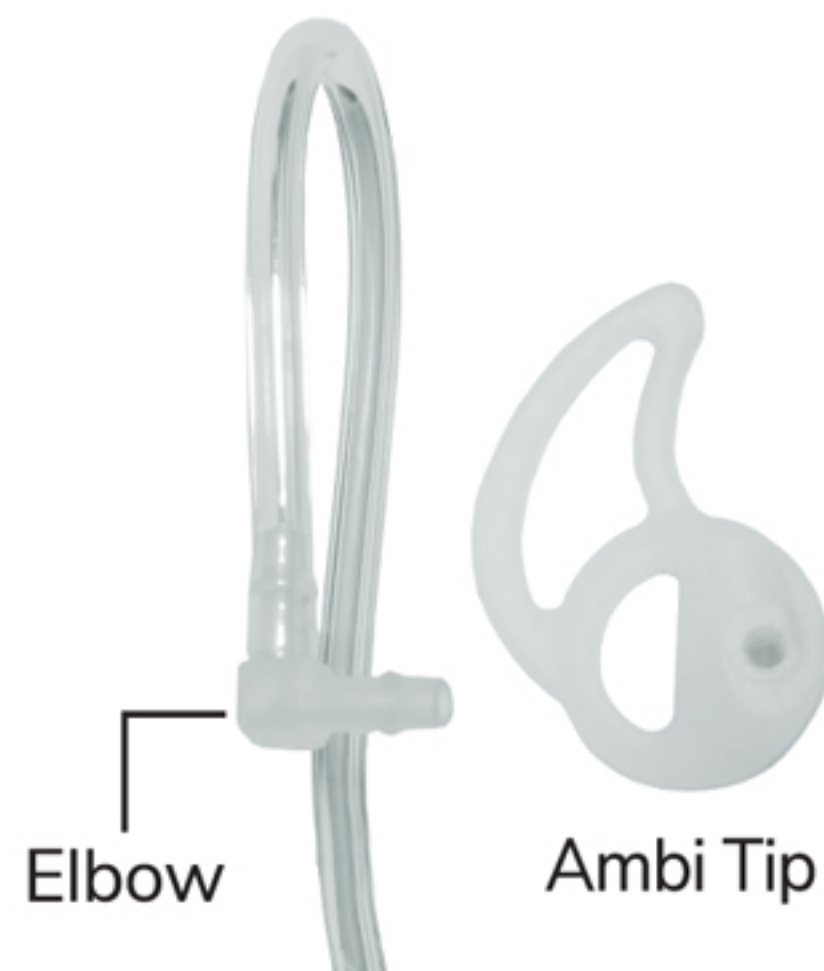

RIGHT EAR

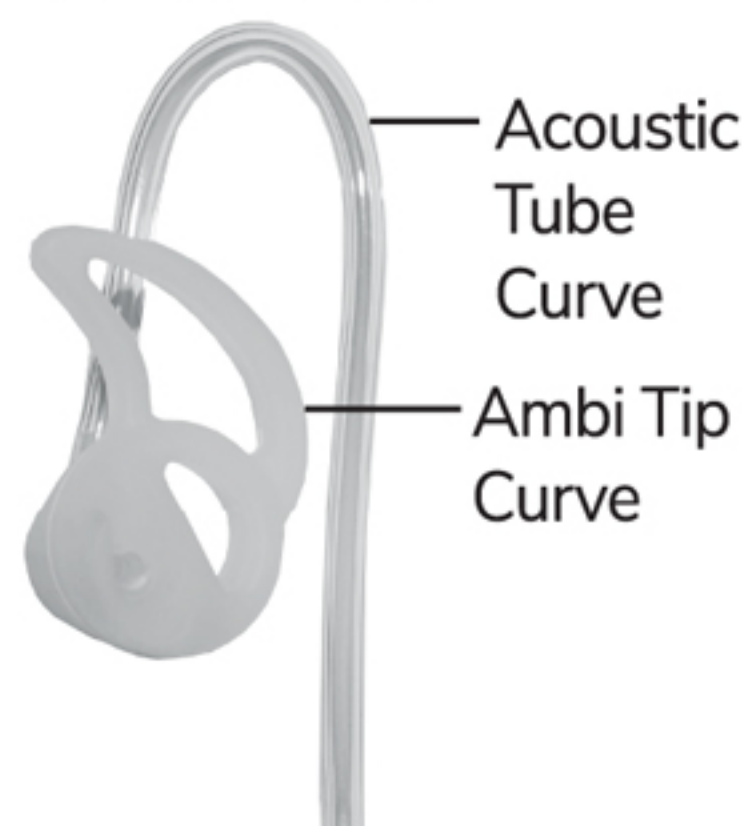

For LEFT EAR:

Remove the Ambi tip from the elbow. *Twist the elbow to the opposite side then re-insert Ambi tip for left ear.*


LEFT




RIGHT



LEFT

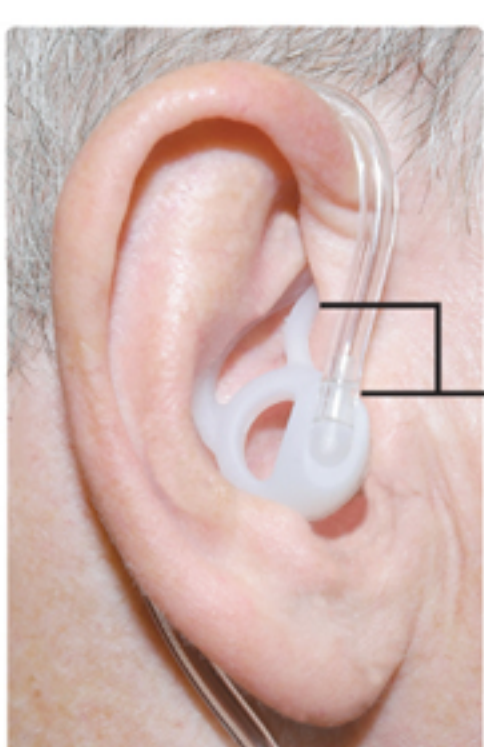

RIGHT

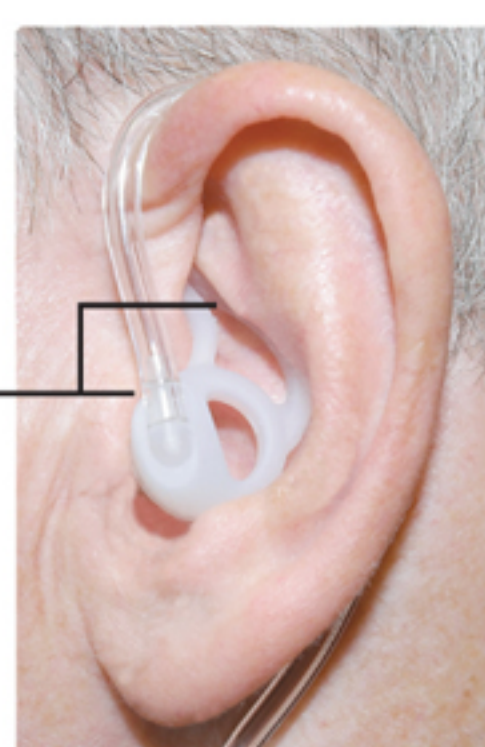

Be sure to insert the
flexible Fin Ultra deep
into the contours of
the ear cartilage for a
secure fit.

FEATURES & BENEFITS:

- ▶ The Fin Ultra™ Ambi is the first ambidextrous ear tip that can be worn in either the left or right ear.
- ▶ Available in Small, Medium & Large in Black & Clear.
- ▶ The Fin Ultra™ Ambi is softer than ever, comprised of Shore 25 Silicone gel, making it one of the most comfortable ear tips available.
- ▶ The Fin Ultra™ Ambi includes wider openings allows for more ambient sound to travel through.
- ▶ The cone shape fits into the opening of the ear canal without penetrating the inside of the ear, reducing ear fatigue.
- ▶ The soft Fin Ultra™ Ambi fits easily inside the contours of the ear, keeping the tip securely in place even during evasive movements.

FREQUENTLY ASKED QUESTIONS:

Q. Does the Fin Ultra™ Ambi come in different sizes?

A. Small, medium, large, left & right.

Q. How do you know the correct size?

A. There is not an exact science. Medium is the most common. For men between 5.6 & 6 ft medium, if taller large, if shorter, small. For most women, medium or small.

Q. How do you know which way they fit?

A. The Fin Ultra™ Ambi is ambidextrous, so it can be worn in either the left or the right ear. For the left ear, you will need to twist the elbow before inserting the Fin Ultra™ Ambi (see diagram).

Q. What if people are allergic to latex?

A. The Fin Ultra™ Ambi is latex free.

AMBIDEXTROUS EAR TIP

