

MANUFACTURER'S LIMITED WARRANTY

Your Sales Receipt is required to validate & obtain warranty services.

Your EPC product is warranted against internal defects in material or workmanship. All of our earphones are warranted for 12 months. Hygiene restrictions prevent us from extending our limited warranty to wearable parts such as: Fin Ultra™ ear tips, earmolds, clear tubes & ear inserts.

The warranty is extended to the original purchaser only and does not cover the following:

- * Physical abuse
- * Damage from tugging or pulling
- * Crushing or smashing in any way, shape or form
- * Improper maintenance of unit
- * Frayed, torn or exposed wires

General misuse of the item such as: Excessive voltage, tampering with the unit or repairs attempted by someone other than the manufacturer will void the MANUFACTURER'S LIMITED WARRANTY.

The manufacturer reserves the right to evaluate & refuse warranty based on their evaluation. In order to obtain warranty services, proof of purchase must be returned along with the product.

For Returns Dept. & Return Authorization # Call Toll Free: (888) 372-1888.

After calling, send your return along with your name address & Return Authorization # to:

The Earphone Connection, Inc.

25139 Avenue Stanford

Valencia, CA 91355

IMPORTANT SAFETY INFORMATION


Earphone Connection, Inc. products are designed to produce a specific audio output level at maximum rated power. Modifying these devices in any way including adding or removing components and accessories may change the audio output of the device and could result in PERMANENT HEARING DAMAGE.

Many countries have regulations defining the amount of noise that an individual can be subjected to during a normal workday. Compliance is application-dependent and standards vary. It is the SOLE RESPONSIBILITY of the end user to determine applicability and compliance to local hearing protection regulations.

Earphone Connection, Inc. strongly recommends that the radio is off before installation of audio accessory. Once audio accessory is securely installed radio can be turned on. Radio volume switch is recommended to set at low position and adjusted once radio is turned on.

FOLLOW US

FACEBOOK • INSTAGRAM • TWITTER • YOUTUBE

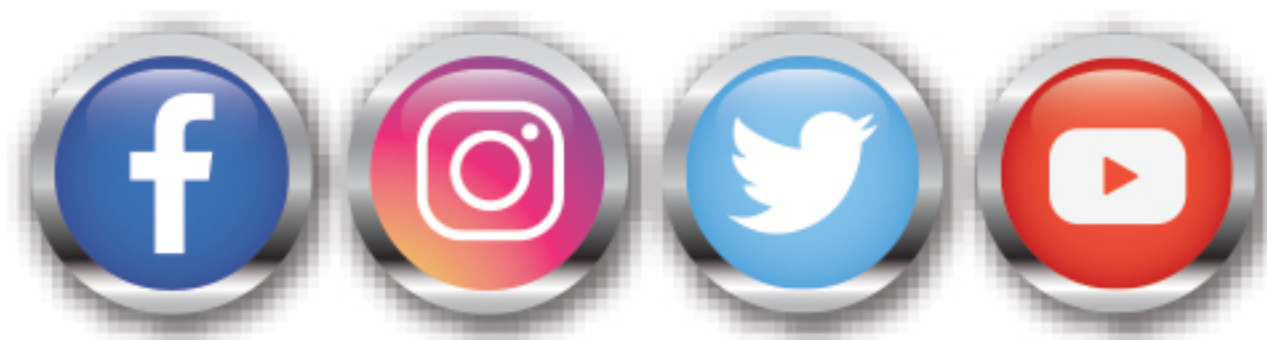

EARPHONE
CONNECTION

888.372.1888

www.earphoneconnect.com

25139 Avenue Stanford
Valencia, CA 91355

EARPHONE
CONNECTION

FOX LISTEN ONLY MANUAL



www.earphoneconnect.com

IMPORTANT: REDUCE THE VOLUME BEFORE CONNECTING YOUR EARPIECE.

Step 1. Connect eartip to the acoustic tube for the desired side i.e., left or right ear.

Step 2. Wrap acoustic tube around ear and insert eartip to ear. Connect speaker to the back of collar or where you see fit.

Connecting to Radio:

Plug earpiece into the radio jack. Run earpiece cable inside garment and thread through pre-sewn button-hole about an inch above the radio holster.



Connecting to Speaker Microphone:

Plug or screw in your listen only earpiece to the speaker microphone audio jack.


Note: Turn on radio and slowly adjust volume to a comfortable level. Loud volume levels could cause harm to your ear.

FIN ULTRA INSTALLATION:

Insert the clear tube **elbow** into the small hole on the **back of the Fin Ultra™ ear tip**. Be sure to push the elbow all the way into the groove of the back of the Fin Ultra™ for secure attachment.

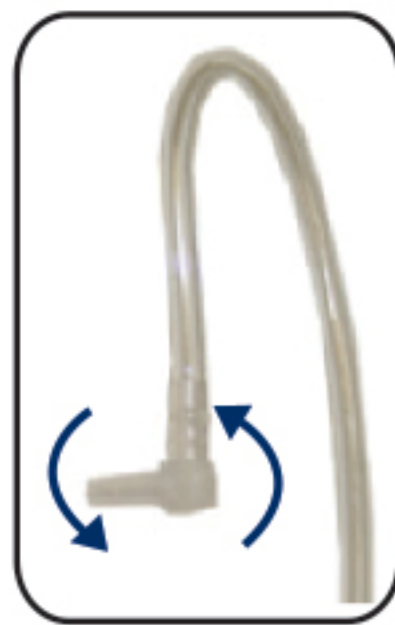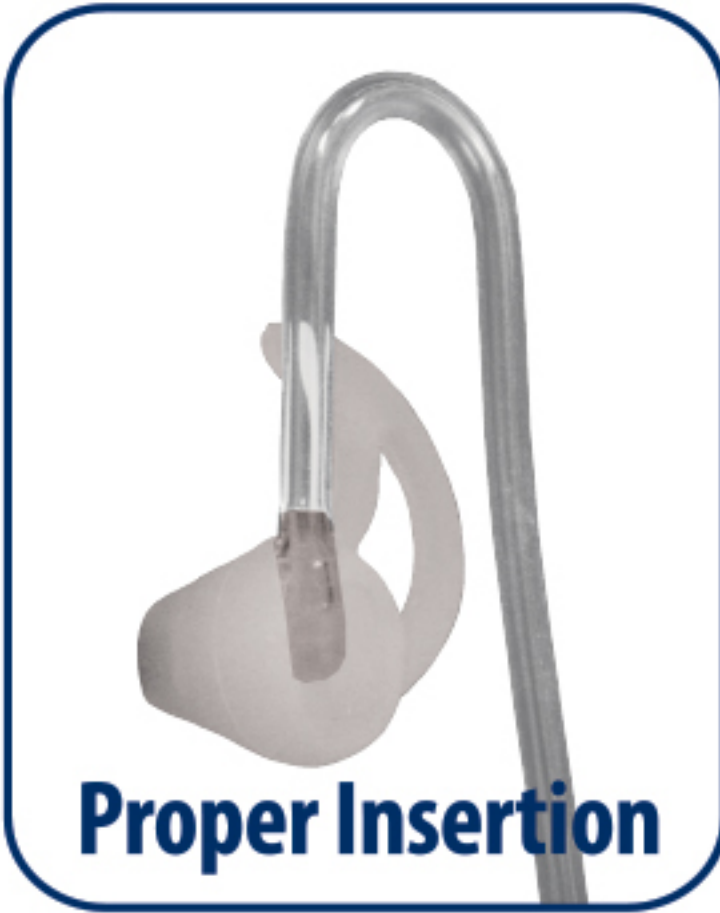


Twist the elbow to attach to the opposite ear.

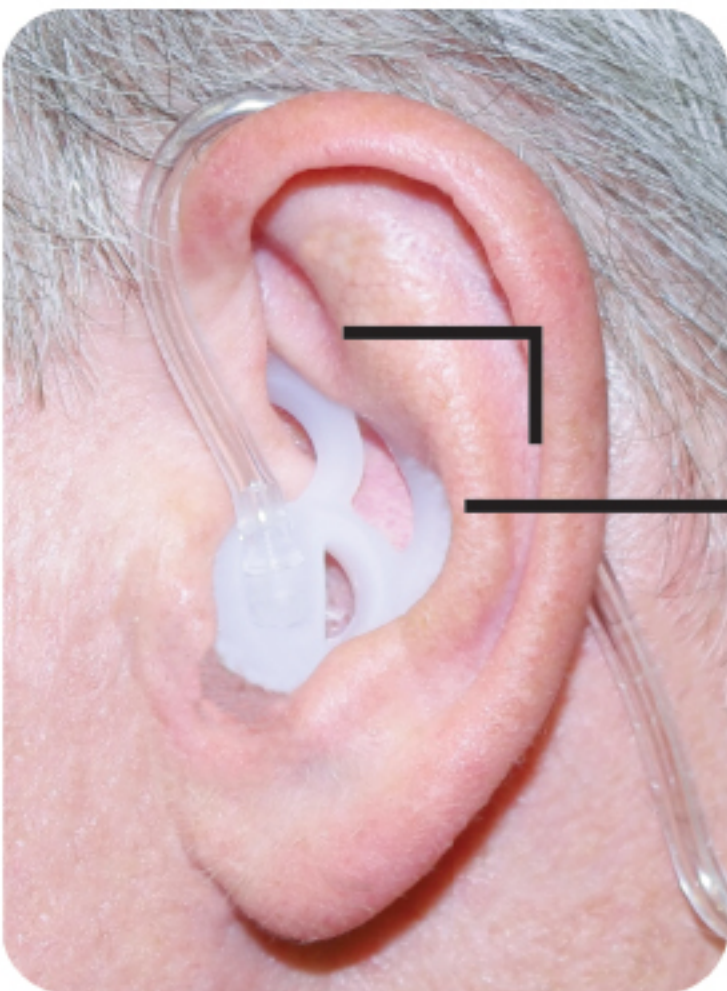

Be sure to insert the flexible Fin Ultra™ deep into the contours of the ear cartilage for a secure fit.

TUBE MAINTENANCE:

Remove the acoustic tube from the speaker by rotating the tube counter clockwise, then pullout.

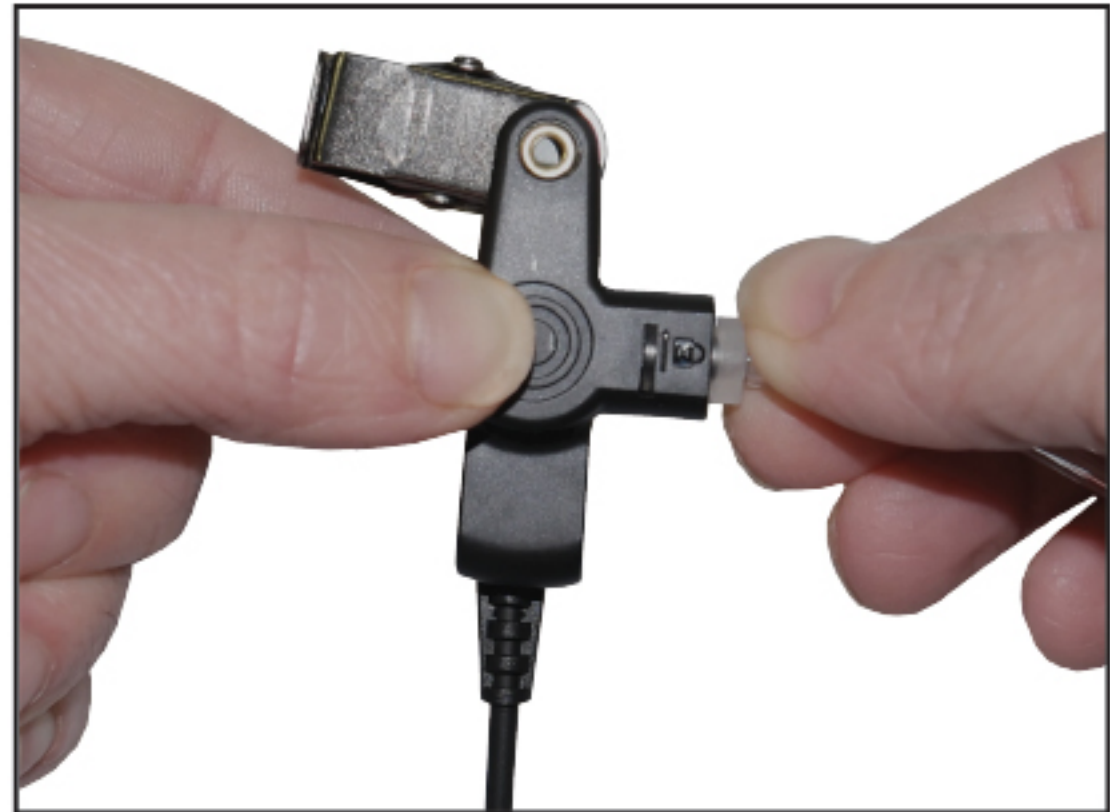

Insert the canned air into tube and blow. This should resolve issue.

Connect the unit to the radio, disconnect the tube and listen to the radio with the speaker to your ear. If you can hear transmission, then the tube maintenance resolved the issue. If not then the unit may need to be replaced.